



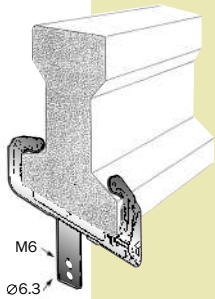


**SOPORTE PARA VIGAS DE HORMIGÓN - SUPPORT POUR POUTRE EN BETÓN  
CONCRETE BEAM SUPPORT - STÜTZE FÜR BETONBALKEN**


**MONTAJE - MONTAGE - INSTALLATION - MONTAGE:**

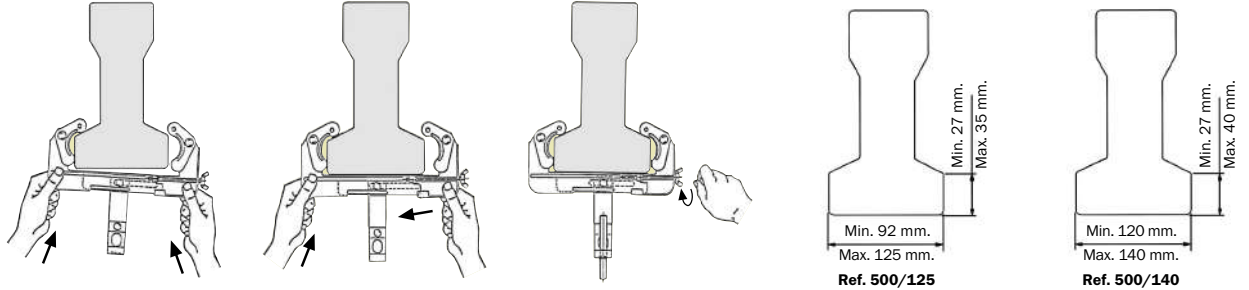


Kg.		Cód.	Ref.	€/100
90	50	10013267	500/125	<b>502,50</b>
90	50	10013282	500/140	<b>502,50</b>

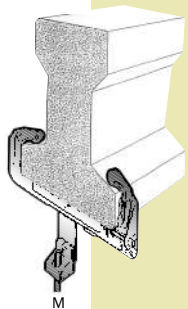

M	Kg.		Cód.	Ref.	€/100
M6	70	50	10013268	500-210/125	<b>633,40</b>
M6	70	50	10013283	500-210/140	<b>633,40</b>
M8	70	50	10013269	500-211/125	<b>633,40</b>
M8	70	50	10013284	500-211/140	<b>633,40</b>
M10	70	50	10013270	500-212/125	<b>633,40</b>
M10	70	50	10013285	500-212/140	<b>633,40</b>

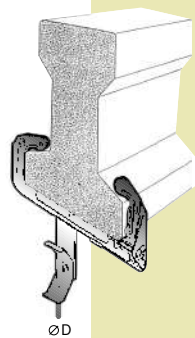

ØD mm.	Kg.		Cód.	Ref.	€/100
4	60	50	10013271	500-220/125	<b>605,80</b>
4	60	50	10013286	500-220/140	<b>605,80</b>
6	60	50	10013272	500-221/125	<b>605,80</b>
6	60	50	10013287	500-221/140	<b>605,80</b>

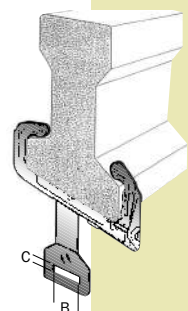

B x C	Kg.		Cód.	Ref.	€/100
28 x 6'5	45	50	10013273	500-230/125	<b>592,00</b>
28 x 6'5	45	50	10013288	500-230/140	<b>592,00</b>